


Montage-handleiding elektrokabelset voor
trekhaak met 13-P contactdoos
vlg. DIN/ISO norm 11446


Fitting instructions electric wiringkit
towbar with 13-P socket up to
DIN/ISO norm 11446

Einbauanleitung Elektrosatz
Anhängervorrichtung mit 13-P Steckdose
lt. DIN/ISO Norm 11446

Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme DIN/ISO 11446
prise 13-P

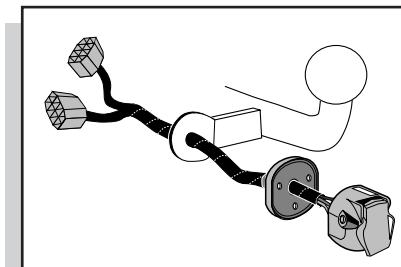

TOYOTA AVENSIS STATION 1998-

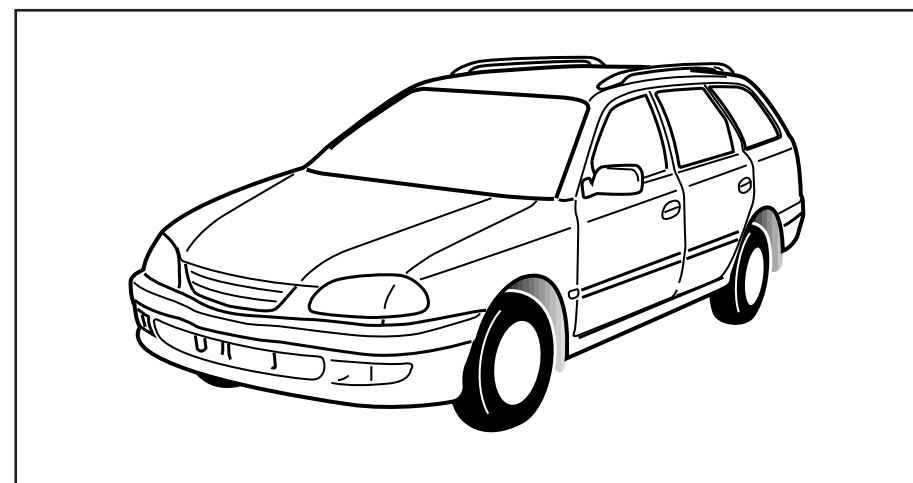














Bestel Nr.: TO-003-HB


* Teilliste

* Liste de pieces

* Part list

* Onderdelenlijst

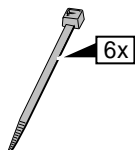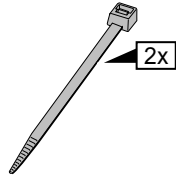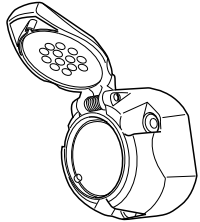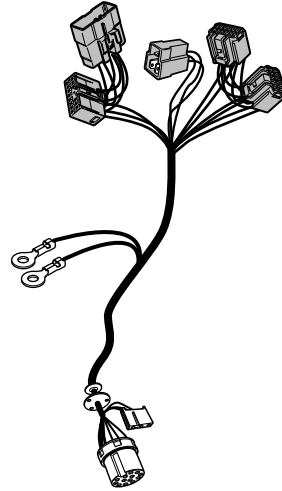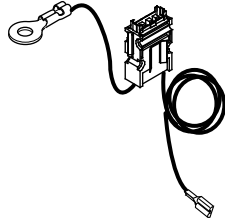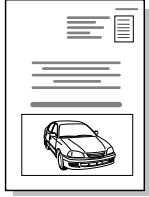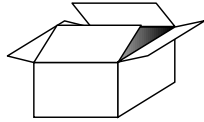

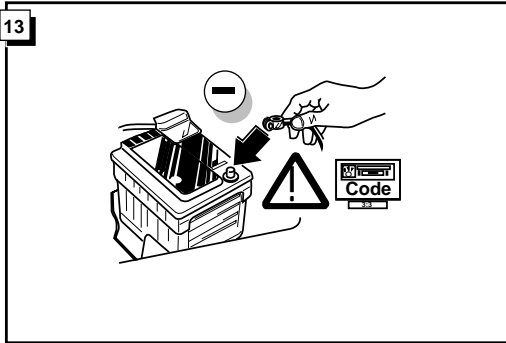

14

! CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
CONTROLEER FUNCTIES !
CONTRÔLER LES FONCTIONS !

